


**SWINGAN**

# TWO-SEATER GLIDER MANUAL

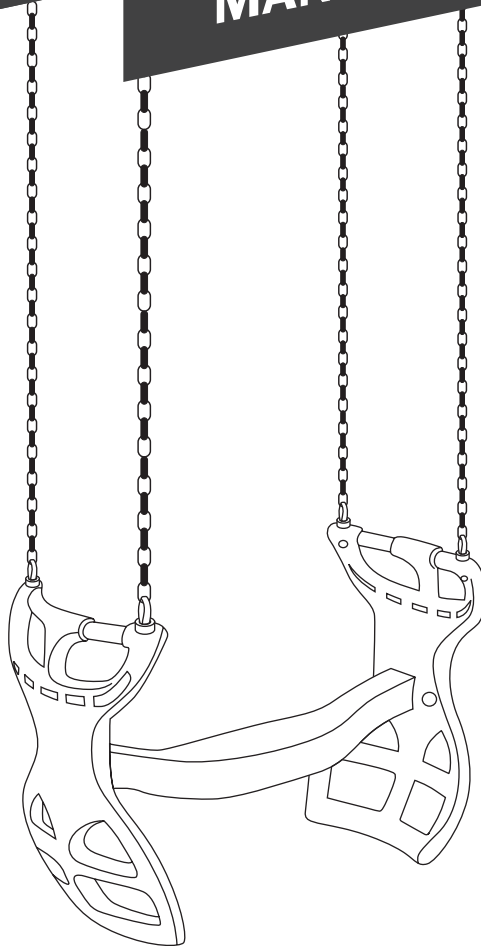

**MACHRUS**  
LET'S GO OUT AND PLAY!

## CONTACT INFO:

☎ US: 1800-574-9323  
UK: 020-3150-0484

✉ [Support@machrus.com](mailto:Support@machrus.com)

🏠 2 Mill St. Cornwall NY 12518

🌐 Web: [www.machrus.com](http://www.machrus.com)

SWINGAN IS PART OF THE MACHRUS FAMILY OF BRANDS

# SAFETY GUIDELINES:

## The Role of Parents in Playground Safety.

While we at Swingan do our utmost to maximize children's safety, parents should supervise their children during play to ensure they are using the glider accessory as intended, and safely. Here are a few guidelines to keeping your kids' backyard play area safe:

### Teach your Kids how to Play it Safe:

- Look First - Never run in front of, behind, or in between moving swings.
- Share - Take turns on the glider swing, only two at a time.
- Wait until it's dry – Always wait until the swing is dry before you play
- No bullies allowed - No pushing, shoving or roughhousing allowed.
- Use responsibly – Use the swing or chains only the way they are meant to be used.

### Add a Protective Surface Under your Swing Set.

We suggest adding a fall surface under your play structure to protect your children in case they lose their balance and fall. We recommend surfacing with rubber mats, rubber mulch, wood chips sand or pea gravel under your all your swings.

### How much space do I really need in my yard?

The amount of space needed for safe play according to the ASTM's guidelines is a 6' safety area around your swing set. This area should be level and free of any obstructions such as plants, sheds, trees or any other structures.

### When Not to Use the Swing


Always check the glider swing after a long period of inactivity. Do not use the swing if:

- There is visible damage to the swing.
- Components are missing.
- Chains are showing excessive wear.
- Hardware is loose.
- There are obtrusions within the 6' safety area.

For more details on playground and swing safety, read the U.S. Consumer Product Safety Commission's guide: [www.cpsc.gov/cpscpub/pubs/325.pdf](http://www.cpsc.gov/cpscpub/pubs/325.pdf)

## TOOLS REQUIRED

1.

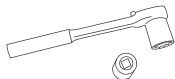


SOCKET & WRENCH

3.



TAPE MEASURE

2.

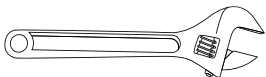








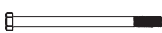
WRENCH

4.



SCREWDRIVER

## KIT COMPONENTS

Part	Description	Quantity
	Glider Hand and Foot Grip	2
	Glider Bench	1
	Glider Chain	4
	Snap Hook	8
	Eye Bolt	4
	Flat Washer	12
	Lock Nut	6
	Hex Bolt	2

### NOTE:


All packaging materials should be disposed of safely as they can be dangerous for children and present a choking hazard.

# STEPS TO INSTALL THE GLIDER SWING


## STEP 1

### Attaching the handles to the bench

**Note:**  
Make sure  
the flat side of  
the bench is  
at the top.

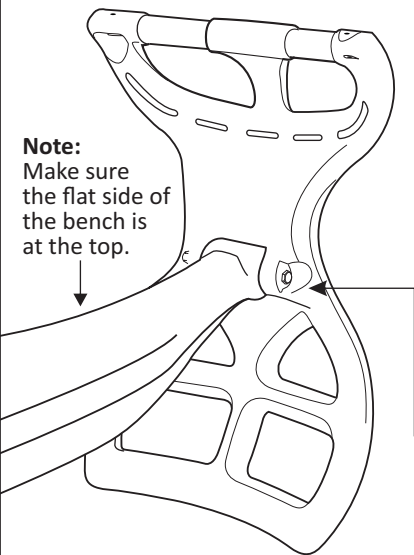



Line up one handle with the bench seat, sliding the bench end into the notch at the inside centre of the handle. Align the holes in the handle with the holes at the end of the bench. Using a flat washer at each end of the fastening, secure the handle in place with a hex bolt and lock nut. Tighten the lock nut until 3 threads of the bolt are visible. Repeat the above for the second handle at the other side of the bench. See figure.

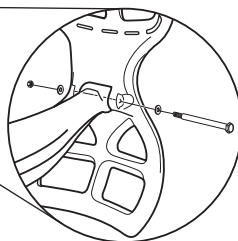

## STEP 2

### Attaching the swing chains


Insert a flat washer and eye bolt into the two holes on the top of each handle, securing from underneath with another flat washer and a lock nut. Secure until 3 threads are visible beyond the lock nut, and the eye bolt is perpendicular to the swing seat.

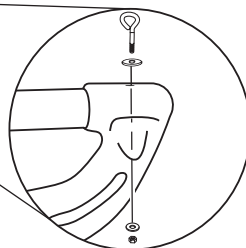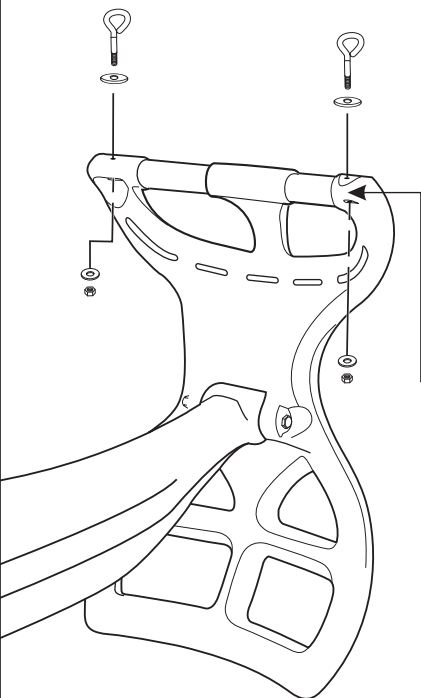

1



Using snap hooks, attach a chain to each of the 4 eye bolts.

2

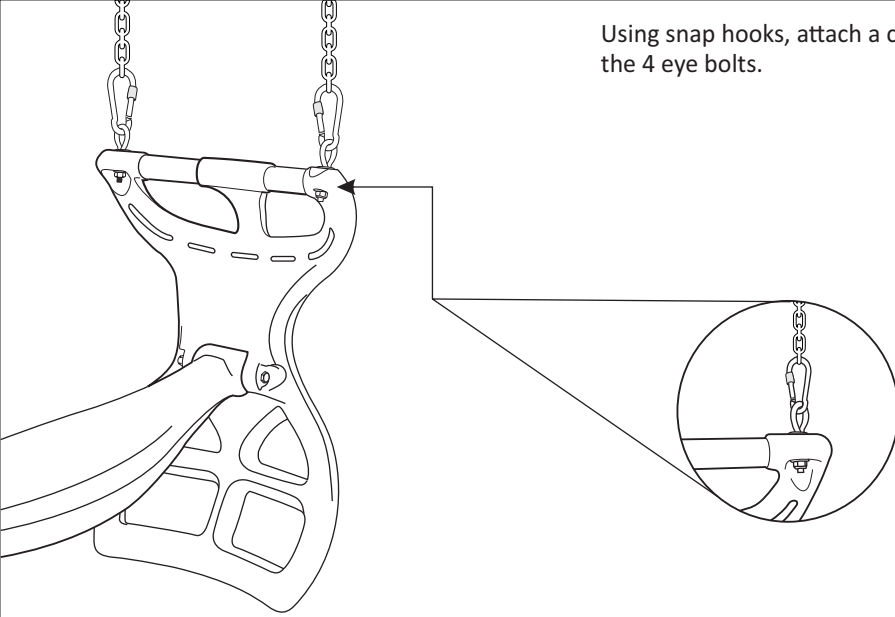

Attach the tops of the chains to your swing frame, either to 4 swing hangers in a rect angular formation; or to 2 swing hangers, hanging one chain from each swing handle to the same hanger.

3

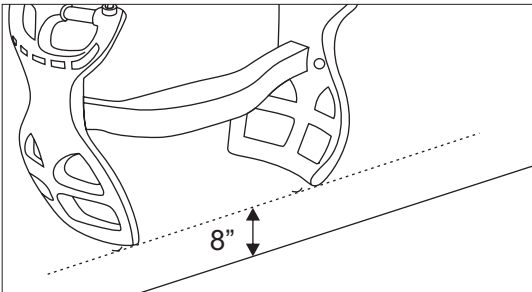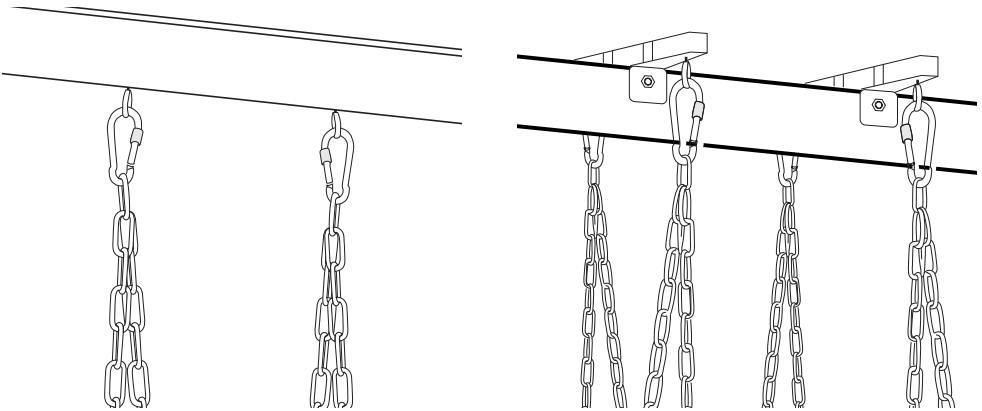

**Note:**

Make sure to hang swing at least 8" above the ground.

Check that all fastenings are secure, including those that came secured by the manufacturer. Jump aboard and hold on for the ride!

THE WEIGHT LIMIT FOR THIS PRODUCT IS 220 LBS TOTAL WEIGHT. UP TO 110 LBS PER CHILD.