


ASSEMBLY MANUAL

Steel Frame Snow Sled with 90°
Steering Wheel, Twin Breaks
& Sports Flag

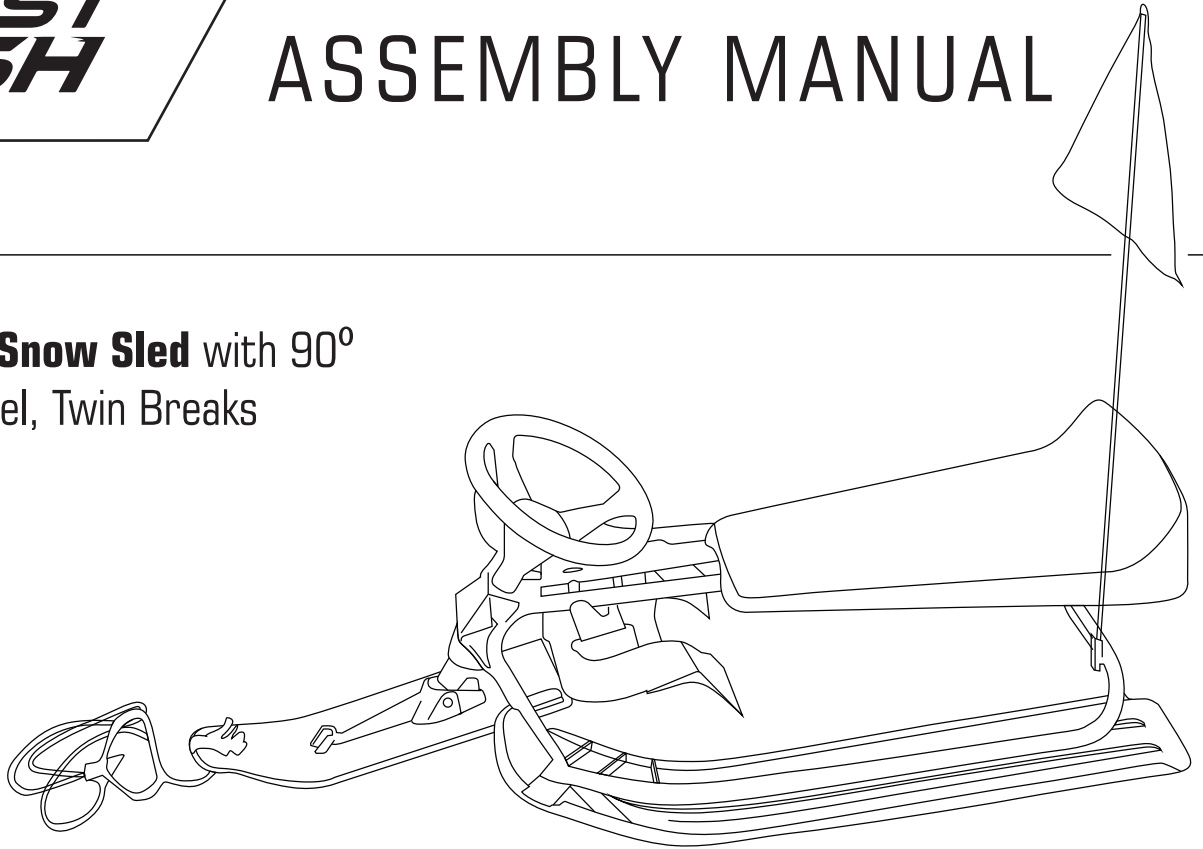

ASSEMBLY STEPS

1. Attach the side skis under the left and right lower parts of the frame, and secure nuts.
2. Screw four bolts through the underside of the top frame, and secure under the seat.
3. Insert the steering shaft into the steering hole.
4. Slip the steering cover over the steering shaft.
5. Insert the bottom of the steering shaft into the front ski.
6. Fasten bolts on the front ski, steering cover and steering shaft.
7. Clip the steering wheel into the steering shaft.
8. Fasten bolts connecting the wheel and the steering shaft.
9. Slip the sports flag over the top of the fiberglass pole.
10. Insert the pole into the cylinder on the back of the left ski.
11. Screw the butterfly bolt through the rubber washer into the flagpole cylinder.